



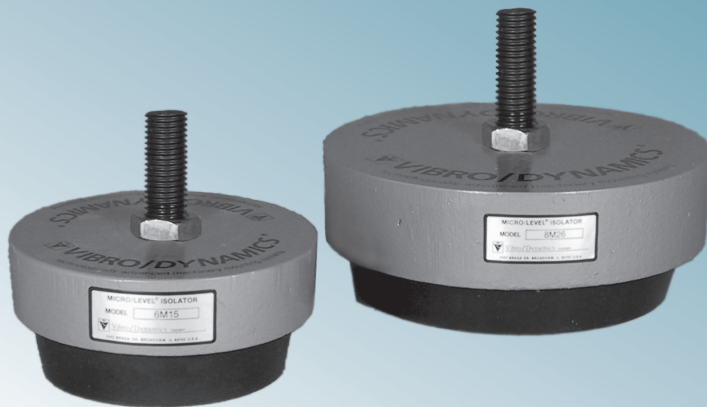

- Elastomer vibration & shock mount
 - protects environment against transmitted vibration & shock
 - protects sensitive equipment from incoming vibration & shock
- Jack Bolt leveling screw
- Proper machine support
- Proprietary elastomer cushions
 - oil and chemical resistant
 - multiple hardness & thickness for better isolation effectiveness
 - neoprene, nitrile standard compounds
- Meets OSHA anchoring requirements


CUSTOM DESIGNS & SIZES ARE AVAILABLE

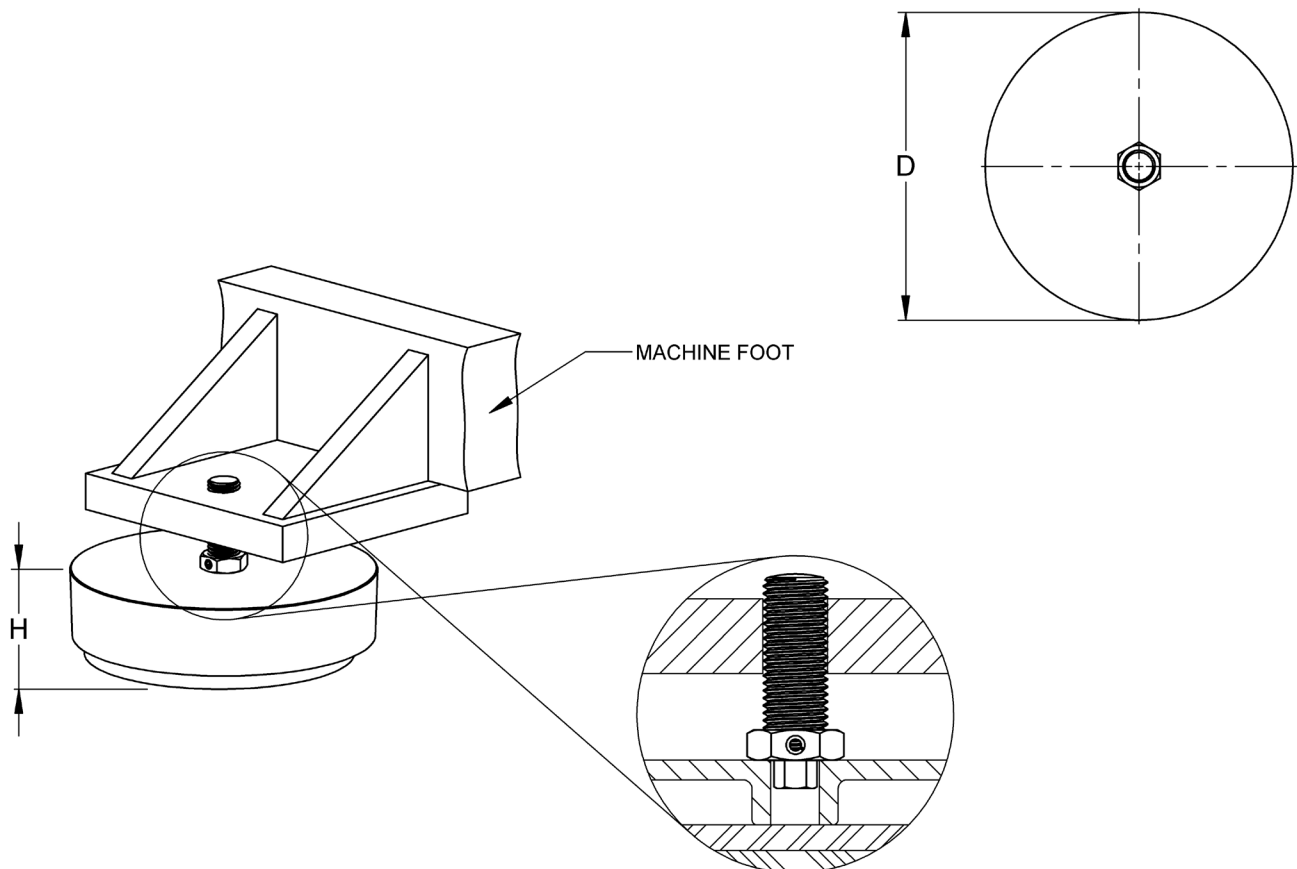

TYPICAL APPLICATIONS

- | | | | |
|----------------|----------------|---------------------|--------------------------|
| • Press Brakes | • Mills | • Broaching | • Vertical Turret Lathes |
| • Shears | • Swagers | • Die Casters | • Machining Centers |
| • Grinders | • Cold Headers | • Injection Molders | • Generators |

Isolator		D		H ±1/8" (3mm)		Weight	
Series	Model	inch	mm	inch	mm	lbs	Kg
6-CP	6L17	5.6	142	1.75	44.5	5.0	2.27
6-CP	6L25	5.6	142	1.75	44.5	5.0	2.27
6-CP	6L40	5.6	142	1.75	44.5	5.0	2.27
6-CP	6K60	5.6	142	1.88	47.8	5.4	2.45
6-CP	6K75	5.6	142	1.88	47.8	5.4	2.45
6-CP	6K100	5.6	142	1.88	47.8	5.4	2.45
6-CP	6M4	5.6	142	2.50	63.5	5.5	2.50
6-CP	6M7	5.6	142	2.50	63.5	5.5	2.50
6-CP	6M10	5.6	142	2.50	63.5	5.5	2.50
6-CP	6M15	5.6	142	2.50	63.5	5.5	2.50
6-CP	6M22	5.6	142	2.50	63.5	5.5	2.50
8-CP	8L70	8.1	206	2.50	63.5	15.1	6.85
8-CP	8L100	8.1	206	2.50	63.5	15.1	6.85
8-CP	8L150	8.1	206	2.50	63.5	15.1	6.85
8-CP	8L220	8.1	206	2.50	63.5	15.1	6.85
8-CP	8K60	8.1	206	2.38	60.5	15.7	7.12
8-CP	8K80	8.1	206	2.38	60.5	15.7	7.12
8-CP	8M32	8.1	206	3.13	79.5	18.0	8.17
8-CP	8M55	8.1	206	3.13	79.5	18.0	8.17
8-CP	8M85	8.1	206	3.13	79.5	18.0	8.17

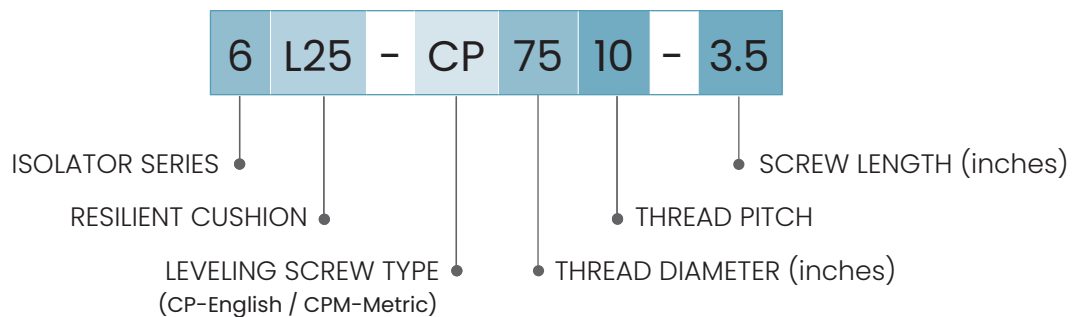

Installation Instructions

1. Floor under isolator should be flat, level, clean and dry, with no bumps, holes, or cracks,
2. Screw the "CP" screw into the machine base as far as possible,
3. Carefully lower the machine so the "pin" end of the "CP" screw fits into the isolator mounting hole,
4. Level the machine by using a wrench to adjust the "CP" screws to raise the low side and end of the machine.

CAUTION!

Do not unscrew the "CP" screws out of the machine base by over-adjusting them.

NOTE: Isolator data subject to change without notice.

10/11/2023



Socitec US LLC
2243 Braga Drive, Broadview, IL 60155
tel.: 800.842.7668 • vibro@vibro-dynamics.com
www.vibro-dynamics.com